

DESIGN AIR CURTAIN **STAVOKLIMA**

Installation and operation manual

Nucleo 3000 model

EN



1. Table of Contents

1. Table of Contents	2
2. Unpacking, check after transport or warehousing	3
2.1. Unpacking and check	3
2.2. Storing of the curtain, additional transport recommendations	3
3. Safety measures	4
4. Basic information about the curtain and its use	4
5. Dimensions of the curtain	5
6. Mounting of the curtain	6
6.1. "A1" under-ceiling suspension	6
6.2. "B" under-ceiling suspension	7
6.3. "A2" wall-mounting suspension	8
6.4. "D" wall-mounting suspension	9
7. Connection of the curtain to heating system	11
7.1. Heat exchanger control with a valve with electrothermic head	12
7.2. Setting of independent valve flow pressure (ETVQ)	12
8. Ditronic Touch controller	13
9. Electric connection of the curtain	13
9.1. Unlocking of emergency thermostat for curtains with the electric heater	14
10. Commissioning, starting of the curtain	14
11. Optional accessories - depending on equipment level	15
12. Basic service and maintenance information	15
12.1. Troubleshooting	16
12.2. Bulb replacement, lighting check	16
13. Cleaning/replacement of the filter	17
14. Decommissioning – disposal	17
15. Important notes	18

Explanation of symbols used

	Instructions for mechanical repairs and maintenance.		Important safety information, technical information, data and device output.
	Important electric information - read carefully - curtain damage hazard in case of wrong installation.		Important information - please read carefully.


2. Unpacking, check after transport or warehousing

2.1. Unpacking and check

Carefully check the delivery note attached to the delivery. For components identified as extra accessories in the delivery note (not included in the curtain or installed therein), please check completeness to the parcel and perfect condition (usually delivered in a separate box). Report any serious damage to packaging or boxes, and make a basic record to the parcel transport documents. Inform the transport company or manufacturer (if the manufacturer arranges transport) immediately.

All packaging material used is environmentally friendly and may be reused or recycled. Dispose of or reprocess the non-environmentally friendly components correctly.

When unpacking, follow the procedure diagrammatically shown below.

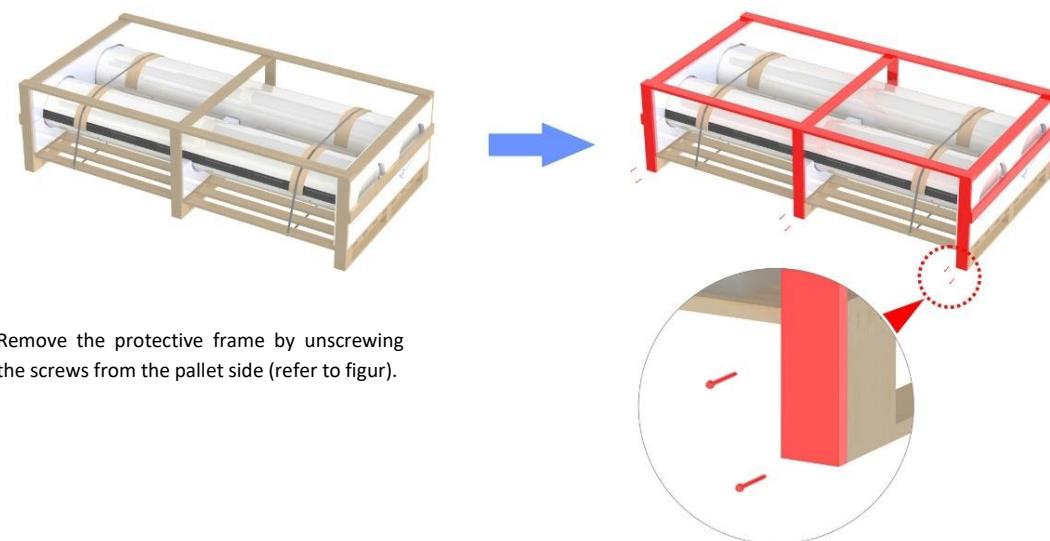

2.2. Storing of the curtain, additional transport recommendations



- Observe packaging decals on the curtain. The device in its packaging must not be turned or placed in transport positions other than those supplied and recommended by the manufacturer. Packaging also contains production number and curtain type for easy curtain type identification.
- Use genuine packaging for further transport of the curtain. The packaging is tested for re-use, and a different packaging may cause damage to the curtain.
- Use means with certified sufficient loading capacity for transport and handling; properly qualified persons only may operate the transport means.
- Permissible warehousing conditions: -10°C ÷ 50°C, 50-85% humidity without condensation.
- Do not remove genuine packaging until installation is complete (to avoid device damage). At least 2 persons are recommended for safe handling.



3. Safety measures

The curtain has been manufactured in line with the government decrees and Czech standards harmonized with the EU regulations mentioned in the manufacturer's declaration of conformity.

The above mentioned product complies with the following standards:

ČSN EN 60335-1 ed.3 ČSN EN 60335-2-30 ed. 3
ČSN EN IEC 61000-6-2 ed. 4 ČSN EN 61000-6-3 ed. 2

The above mentioned product complies with the following directives:

- Directive 2009/125/EC of the European Parliament and of the Council establishing a framework for the setting of eco-design requirements for energy-related products.
- Government Decree No. 118/2016 Coll. Directive 2014/35/EU of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits.
- Government Decree No. 117/2016 Coll. Directive 2014/30/EU of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.
- Government Decree No. 481/2012 Coll. (Regulation of the European Parliament and of the Council No. 2014/35/EU, Regulation of the European Parliament and of the Council No. 2011/65/EU).
- Government Decree on restriction the use of some hazardous materials found in electrical and electronic products.

Observe generally applicable national provisions and other related regulations. Unplug the curtain from mains before any service intervention. Connection and earthing of the electric device or components thereof must be in line with laws applicable in the country of use. Only qualified staff may carry out any electric service works.

Observe applicable laws, in particular:



- on safety of electric and thermal appliances,
- on central heat distribution systems,
- on fire safety,
- do never exceed working pressure and temperature specified in the production label.

Follow standards and rules applicable in the country of use, in particular the fire safety of appliances and heat sources, and the fire technical properties of materials - flammability levels. Place the curtain 150mm from B, C1, C2 level flammable materials, and 400mm and 1000mm for C3 level easily flammable materials in the radiation direction (air flow from the curtain).

4. Basic information about the curtain and its use

An air curtain is a device, which produces a natural air barrier against penetration of cold air into heat environment (in summer, it operates as a protection against penetration of hot summer air to the spaces being either cooled or air conditioned). These devices are suitable for basic and non-aggressive environment. The permitted temperature range in the space is 5–40 °C.


For the curtaining purposes, either circulation air of the environment temperature or the circulation air heated by hot-water or electric heater may be used. The use of the device can save high cooling costs in the air conditioned spaces. Full performance of the curtain may be provided only when maintenance is regular and proper. All controls are accessible and well maintained.

Technical conditions for curtain operation:



- max. media working temperature 90°C/pressure 1.6MPa – unless specified otherwise,
- hot water working voltage – 230V/50Hz, electric heater curtain working voltage - 400V/50Hz,
- max. surrounding temperature 40°C,
- IP rating of hot water curtain - IP 20/IP rating of electric heater curtain - IP 20,
- the curtain is intended for basic and non-aggressive environment,
- the hot water curtains are equipped with a filter - use only the filters supplied by the manufacturer!
- minimum pressure difference 23kPa must be provided for use of a 2W valve (applies only to a pressure-independent valve).

5. Dimensions of the curtain

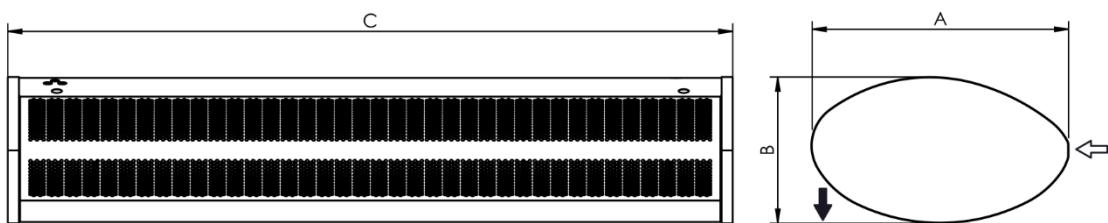


Model	Dimensions (mm)			
	A	B	C	Exhaust height max
Nucleo 3000 10X	715	405	1010	2400
Nucleo 3000 100	715	405	1010	2800
Nucleo 3000 101	790	480	1010	3200
Nucleo 3000 15X	715	405	1510	2400
Nucleo 3000 150	715	405	1510	2800
Nucleo 3000 151	790	480	1510	3200
Nucleo 3000 20X	715	405	2010	2400
Nucleo 3000 200	715	405	2010	2800
Nucleo 3000 201	790	480	2010	3200
Nucleo 3000 25X	715	405	2480	2400
Nucleo 3000 250	715	405	2480	2800
Nucleo 3000 251	790	480	2480	3200

6. Mounting of the curtain

Installation under ceiling



Suspension A1
(Only for option with an electric heater)

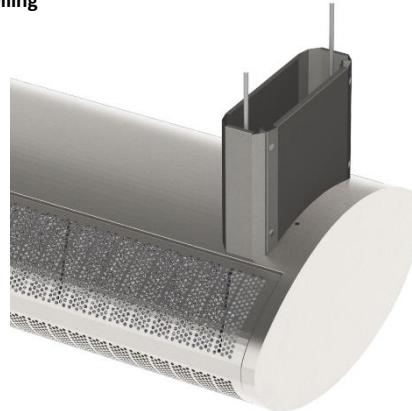

Suspension B

Wall-mounting installation



Suspension A2
(Only for option with an electric heater)



Suspension D

6.1. "A1" under-ceiling suspension



The door curtain is suspended in two suspension points on the curtain casing. The suspension points are accessible from outside and rivet nuts (M10 threads) are installed on the curtain from production plant. The ceiling suspensions A1 are designed only for cold-air air curtains and with electric heating. The suspension height is exactly specified in a purchase order.


Upon special purchase order, the following is supplied as accessories to the A1 under-ceiling suspensions:

2 pcs brackets, 4 pcs covers, 8 pcs bolt M10x45 - 8.8, 8 pcs flat washers size 10, 8 pcs spring washers size 10, 16 pcs screw 4,8x13.

Assembly procedure:

1. Measure position of the air curtain with suspensions and mark anchoring points on the ceiling (for drilling template, refer to page 7).
2. Drill the holes for installation of the anchors. Always use corresponding drilling bit for wall plugs/anchors.
3. Apply the chemical anchor into the drilled holes and insert the wall plugs/anchors.
4. Install hignes onto the air curtain and attach using the supplied fasteners.
5. Cover the mounting holes on the air curtain with end caps using screws.
6. Locate the air curtain to the desired place on the ceiling and attach with appropriate fasteners.
7. Level up the air curtain and carefully tighten the screws. Check for proper and safe suspension.

8. Lead the wires through the hole in the suspension up to the wiring cabinet in the air curtain.

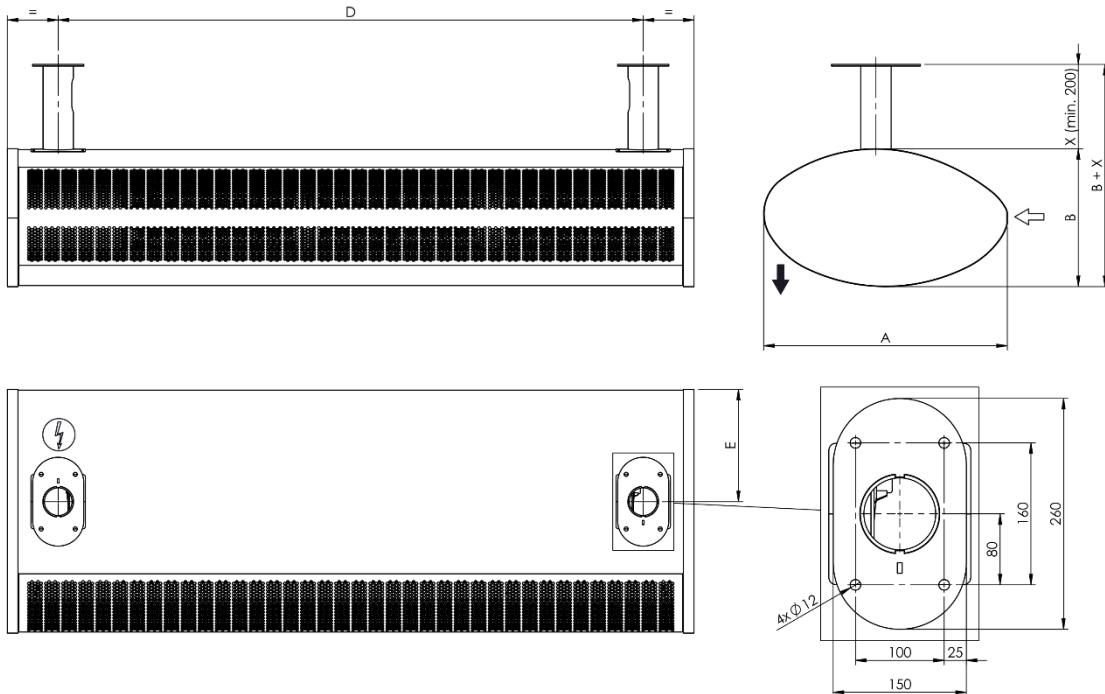

Model	Dimensions (mm)			
	A	B	D	E
Nucleo 3000 10X (100)	715	405	715	330
Nucleo 3000 101	790	480	715	370
Nucleo 3000 15X (150)	715	405	1215	330
Nucleo 3000 151	790	480	1215	370
Nucleo 3000 20X (200)	715	405	1715	330
Nucleo 3000 201	790	480	1715	370
Nucleo 3000 25X (250)	715	405	2185	330
Nucleo 3000 251	790	480	2185	370

6.2. "B" under-ceiling suspension




The door curtain is suspended in four suspension points on the curtain casing. The suspension points are accessible from outside and rivet nuts (M10 threads) are installed on the curtain from production plant. The suspension height is exactly specified in a purchase order.

Upon special purchase order, the following is supplied as accessories to the B under-ceiling suspensions:


2 pcs "B" extension, 2pcs lids for "B" extensions, 4 psc of M10x1000 - 8.8 threaded bar, 4 pscs of M10/40 anchors, 4 pcs M10 left-right suspension sleeve, 4 pcs of M10 left-right bolt, 8 pcs M10 - 8.8 nuts, 8 pcs bolt M5x12, 4 pcs screws 4,8x13, 8 pcs plastic plugs.

Assembly procedure:

1. Measure position of the air curtain and mark anchoring points on the ceiling (for drilling template, refer to page 8).
2. Drill the holes for installation of the anchors. Always use corresponding drilling bit for wall plugs/anchors.
3. Apply the chemical anchor into the drilled holes and insert the wall plugs/anchors.
4. Cut the threaded bars to required length.
5. Attach left-right bolt into the curtain, fasten with nuts, and rotate left-right suspension sleeves on the bolt.

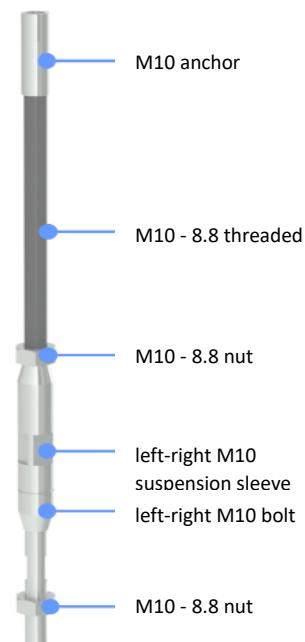

6. Fit the threaded rods into the prepared ceiling anchors and rotate the nuts.
7. Set the curtain into the required position and tighten up the suspension sleeve to the threaded bars until the required connection is made, then secure the sleeve with nuts.
8. Level up the air curtain and carefully tighten the screws. Check for proper and safe suspension.
9. Screw the extensions to the air curtain using the screws.
10. Fit lids on the extensions, fasten with M5x12 screws and cover the holes with end caps.

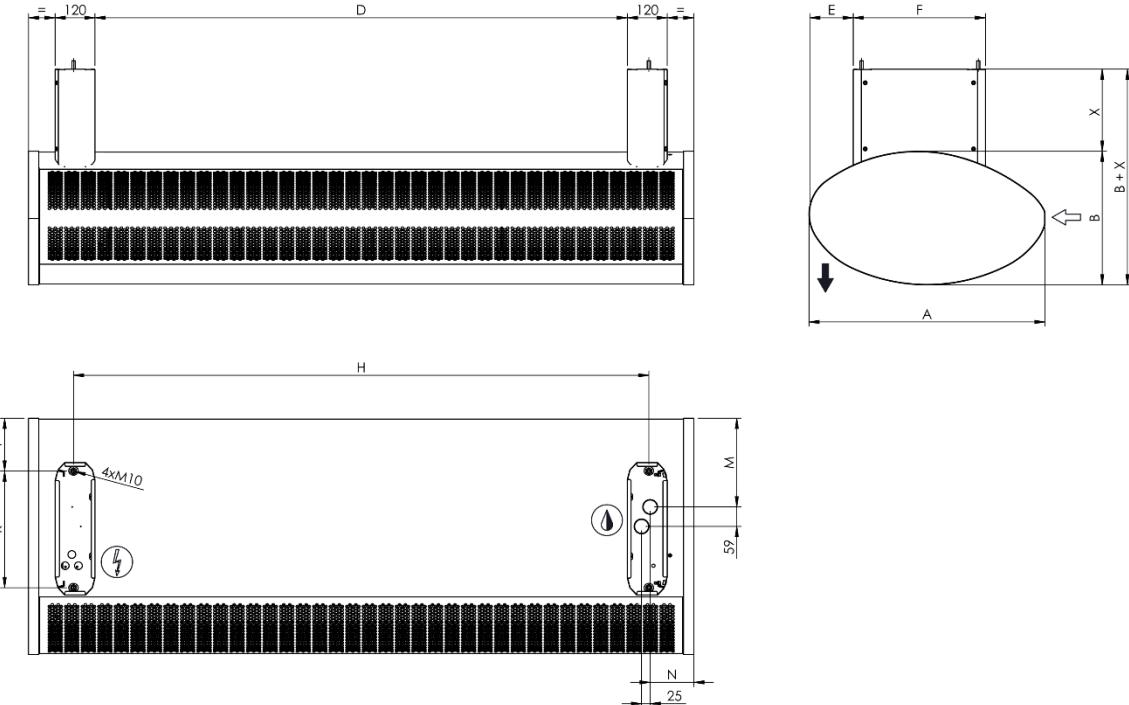

Model	Dimensions (mm)									
	A	B	D	E	F	H	I	K	M	N
Nucleo 3000 10X (100)	715	405	610	130	400	740	160	350	270	130
Nucleo 3000 101	790	480	610	155	425	740	180	380	290	125
Nucleo 3000 15X (150)	715	405	1110	130	400	1240	160	350	270	130
Nucleo 3000 151	790	480	1110	155	425	1240	180	380	290	125
Nucleo 3000 20X (200)	715	405	1610	130	400	1740	160	350	270	130
Nucleo 3000 201	790	480	1610	155	425	1740	180	380	290	125
Nucleo 3000 25X (250)	715	405	2080	130	400	2210	160	350	270	130
Nucleo 3000 251	790	480	2080	155	425	2210	180	380	290	125

6.3. "A2" wall-mounting suspension



The door curtain is suspended in two suspension points on the curtain casing. The suspension points are accessible from outside and rivet nuts (M10 threads) are installed on the curtain from production plant. The ceiling suspensions A2 are designed only for cold-air air curtains and with electric heating. The suspension height is exactly specified in a purchase order.


Upon special purchase order, the following is supplied as accessories to the A2 wall-mounting suspensions:

2 pcs brackets, 4 pcs covers, 8 pcs bolt M10x45 - 8.8, 8 pcs flat washers size 10, 8 pcs spring washers size 10, 16 pcs screw 4,8x13.

Assembly procedure:

1. Measure position of the air curtain with suspensions and mark anchoring points on the wall (for drilling template, refer to page 9).
2. Drill the holes for installation of the anchors. Always use corresponding drilling bit for wall plugs/anchors.
3. Apply the chemical anchor into the drilled holes and insert the wall plugs/anchors.
4. Install hinges onto the air curtain and attach using the supplied fasteners.
5. Cover the mounting holes on the air curtain with end caps using screws.
6. Locate the air curtain to the desired place and attach with appropriate fasteners.

7. Level up the air curtain and carefully tighten the screws. Check for proper and safe suspension.
8. Lead the wires through the hole in the suspension up to the wiring cabinet in the air curtain.

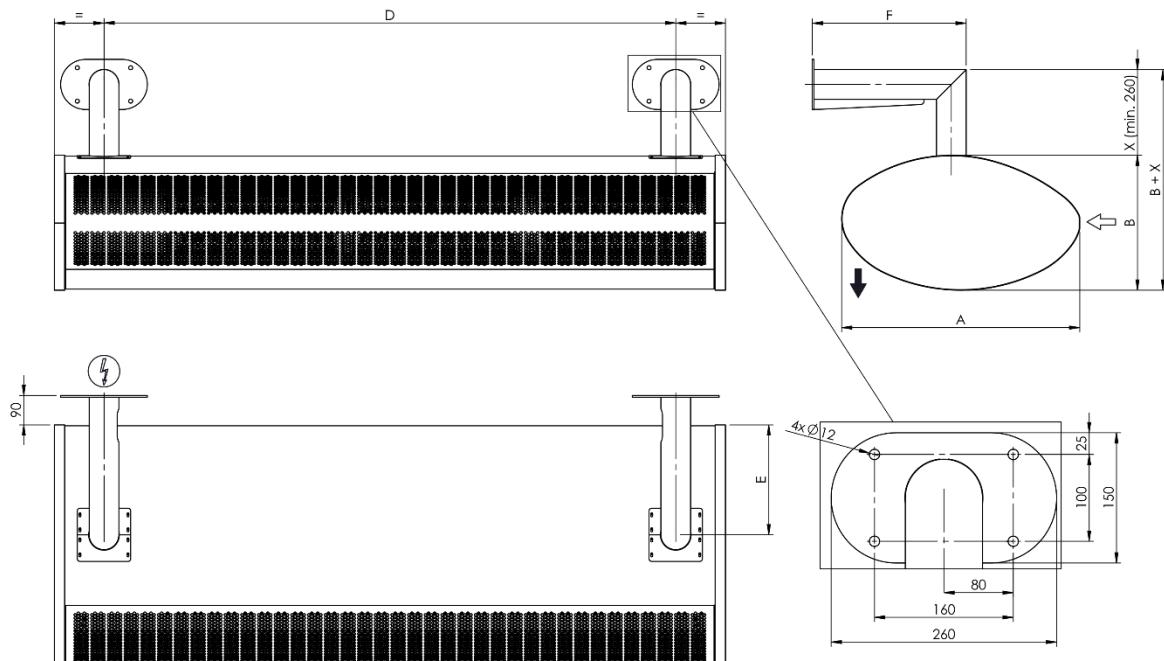

Model	Dimensions (mm)				
	A	B	D	E	F
Nucleo 3000 10X (100)	715	405	715	330	460
Nucleo 3000 101	790	480	715	370	500
Nucleo 3000 15X (150)	715	405	1215	330	460
Nucleo 3000 151	790	480	1215	370	500
Nucleo 3000 20X (200)	715	405	1715	330	460
Nucleo 3000 201	790	480	1715	370	500
Nucleo 3000 25X (250)	715	405	2185	330	460
Nucleo 3000 251	790	480	2185	370	500

6.4. "D" wall-mounting suspension



The door curtain is suspended in two suspension points on the curtain casing. The suspension points are accessible from outside and rivet nuts (M10 threads) are installed on the curtain from production plant. The suspension height is exactly specified in a purchase order.


Upon special purchase order, the following is supplied as accessories to the D wall-mounting suspensions:

2 pcs brackets, 2 pcs "B" extension, 2 pcs "D" extension, 2 pcs lids for "B" extensions, 2 pcs lids for "D" extensions, 4 pcs of M10x1000 - 8.8 threaded bar, 4 pcs M10 left-right suspension sleeve, 4 pcs of M10 left-right bolt, 16 pcs M10 - 8.8 nuts, 8 pcs spring washers size 10, 16 pcs bolts M5x12, 4 pcs screws 4,8x13, 16 pcs plastic plugs.

Assembly procedure:

1. Measure position of the air curtain with suspensions and mark anchoring points on the wall (for drilling template, refer to page 10).
2. Drill the holes for installation of the anchors. Always use corresponding drilling bit for wall plugs/anchors.
3. Apply the chemical anchor into the drilled holes and insert the wall plugs/anchors.
4. Attach the brackets onto the wall using appropriately selected fasteners.
5. Cut the threaded bars to required length.
6. Attach left-right bolt into the curtain, fasten with nuts, and rotate left-right suspension sleeves on the bolt.
7. Mount nuts on the threaded bars and fit them into prepared left-right housings on the air curtain, then secure the housings with the nuts.

8. Put the air curtain to the desired position and guide the threaded bars through the holes in the suspended brackets, and tighten with nuts.
9. Level up the air curtain and carefully tighten the nuts. Check for proper and safe suspension.
10. Screw the B extensions to the air curtain using the screws.
11. Cover the bracket with D extensions and screw the lid for the D extension thereon, use M5x12 screws, and cover the holes with end caps.
12. Fit lids on the B extensions, fasten with M5x12 screws and cover the holes with end caps.

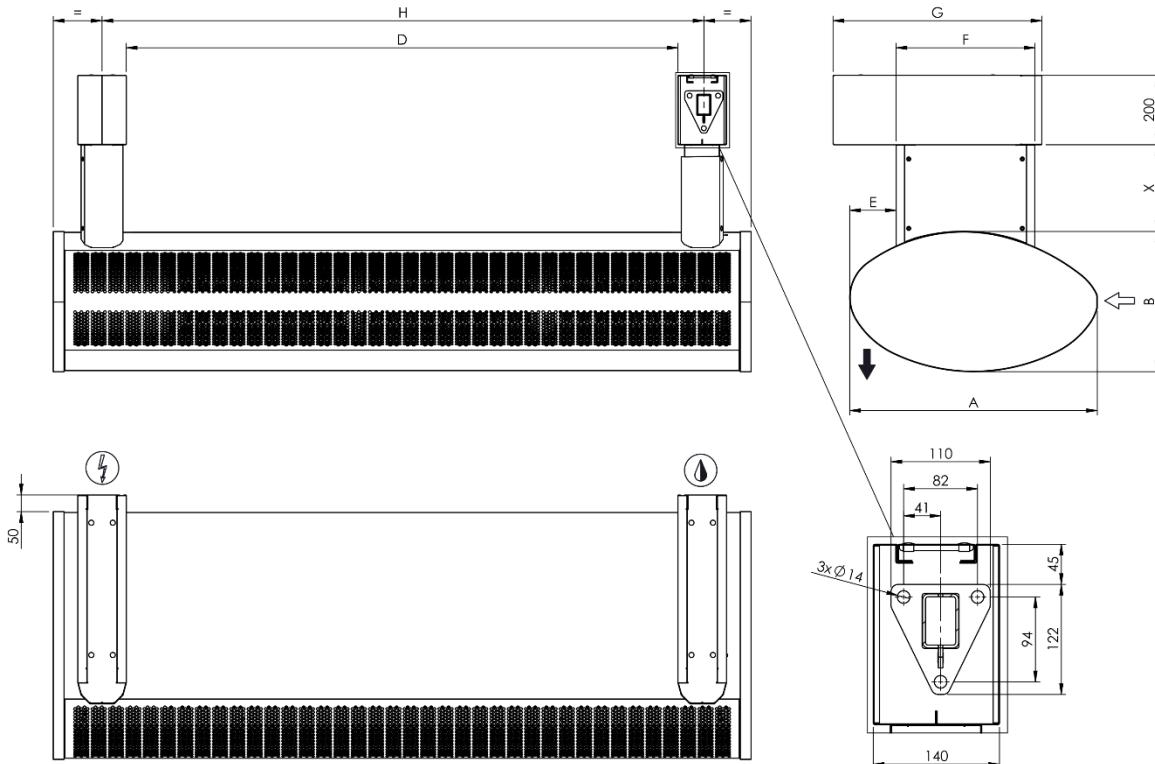

Model	Dimensions (mm)						
	A	B	D	E	F	G	H
Nucleo 3000 10X (100)	715	405	590	130	400	600	735
Nucleo 3000 101	790	480	590	155	425	625	735
Nucleo 3000 15X (150)	715	405	1090	130	400	600	1235
Nucleo 3000 151	790	480	1090	155	425	625	1235
Nucleo 3000 20X (200)	715	405	1590	130	400	600	1735
Nucleo 3000 201	790	480	1590	155	425	625	1735
Nucleo 3000 25X (250)	715	405	2060	130	400	600	2205
Nucleo 3000 251	790	480	2060	155	425	625	2205

 Pay attention to correct fitting of all nuts to all assembly components. Pay attention to the end position of the threads to avoid loosening and falling the curtain by rotation.

Use quality anchors and wall plugs only. Consider installation situation and suitability of anchoring and installation material, including loading capacity of the structure properly. The manufacturer accepts no liability for improperly used wall plugs or other installation and hanging material!


Following the assembly, check for horizontal position in both directions. Make sure that tightening up of individual hangers and sleeves do not cause crossing and twisting of the curtain. Always properly consider loading capacity of the ceiling or of the wall. Install the device to structurally solid beams.

Always suspend the device to all suspension points.

7. Connection of the curtain to heating system




Please check all hot water connections for readiness and perfect condition before connecting media to the curtain. Furthermore, please check the hot distribution for components or other measures to ensure zero transmission of static, dynamic, and dilatation forces at the input and output neck connections. No excessive force may be applied when connecting the hot water circuit of the building to the curtain's heat exchanger. By the neck of the air conditioner there is a mark that notes use of two keys so that no stressing of the necks occurs in the course of tightening or loosening. **When bolting and tightening up the screw union of the heat exchanger must be secured by a clamp against undesired rotation that may subsequently result in deformations or damage to pipe necks on the heat exchanger.**

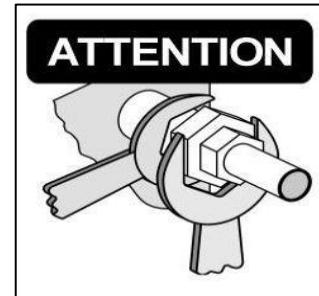

Considering the above the manufacturer clearly recommends that flexible connection hoses are used for connection of the heat exchanger necks (available as PPH accessories, length 300mm, DN20, 25, 32), or a bellows compensator.

Any non-compliance with the instructions above results in rejection of any complaint.

By default, neck for the hot water heater is located on the right hand side on the upper part of the curtain (may be placed elsewhere upon request). The inputs are identified by round marks – **medium input red** with arrow pointing inside, and **medium output blue** with arrow pointing outside.

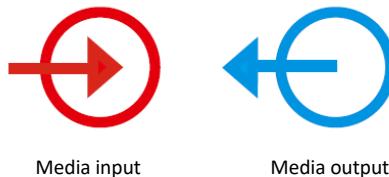

Do not swap the return and supply neck positions - this may cardinally change performance and parameters of the heater with consequent impact on the hydraulic system. Do not exceed max temperature and pressure for which the curtain is rated.

If required, the valve may be embedded in the curtain. Some types of the valves may not be placed in the curtain for room reasons (located outside the equipment). The function of the electrothermic valve drive is given by a control type. The connection is then made directly on the neck for media input. The function of the electrothermic drive, refer to article 7.1.


Pay attention to quality of media fed to the curtain; check for installation of cleaning valve downstream the curtain (not included in the supply). Observe max temperature and media pressure to avoid heat exchanger damage. To make sure the heat exchanger operates correctly, drain the exchanger (sludge valve) and purge the cleaning valve because construction or assembly impurities may be present in the system. Deaerate the heat exchanger for perfect operation of the heat exchanger. Install the closing valves on both pipes downstream the curtain (ball valves) . Connection thread right above the curtain must be removable and not fixed.




As required by the customer, an embedded 2-way or 3-way valve with control head can be delivered for the hot water heat exchanger. The valve drive is electrothermic.

Hole for aeration of heat exchanger

Instructions for electric connection of the valve is included in the wiring scheme for connection of the curtain. Specific wiring scheme or valve instructions are available upon request only.

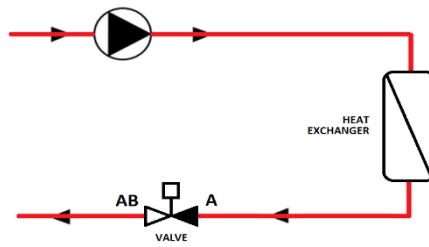

Connection of 2-way ETVQ valve

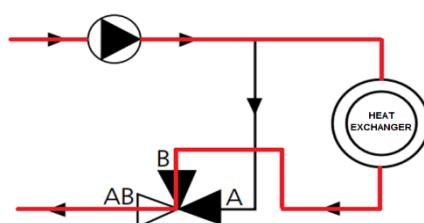



Connection of 3-way ETVT valve

7.1. Heat exchanger control with a valve with electrothermic head

The electrothermic valve drive can be supplied to the hot water heat exchanger as embedded either as 2-way (ETVQ) or 3-way (ETVT).

“Normally open” version (NO).

When the thermal drive is under voltage, the electrically heated sensor heats up Upon “dead time” expiration for continuous opening of thermic drive due to cooling down of the sensor.

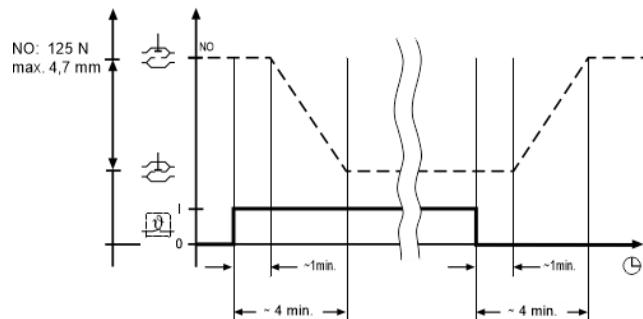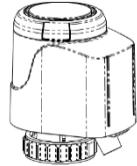


Note:

The time delay (dead time) needs to be considered during the functional test; the opening and closing time depends on surrounding temperature. Electric data: 230V/50Hz-3V, IP 54.


7.2. Setting of independent valve flow pressure (ETVQ)

Setup

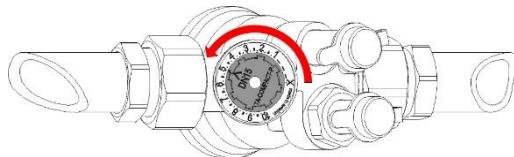

Turn the setting wheel to required value, e.g., 5.0.

Closing

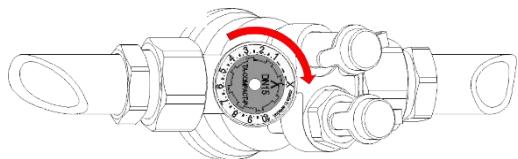

Turn the setting wheel counterclockwise to position X.

q_{\max} values

Setup

	1	2	3	4	5	6	7	8	9	10
DN 25	370	610	830	1050	1270	1490	1720	1870	2050	2150
DN 32	800	1220	1620	2060	2450	2790	3080	3350	3550	3700


$q_{\max} = \text{l/h}$ for each setting with the control cone fully open

8. Ditronic Touch controller



The Ditronic Touch controller is highly comfortable controller for fan and heater control (hot water heater and electric one) with optional connection of external elements (door contact, BMS, etc.). Controller function is defined by type of the electric documentation. The controller is designed for wall-mounted installation and a separate instructions manual is available. Included to the controller is the Ni-1000 room sensor to be connected to the control board according to the electric wiring documentation.

The connection between the air curtain and the controller is made using a UTP cable with RJ 45 connector (available as optional accessories in various lengths).

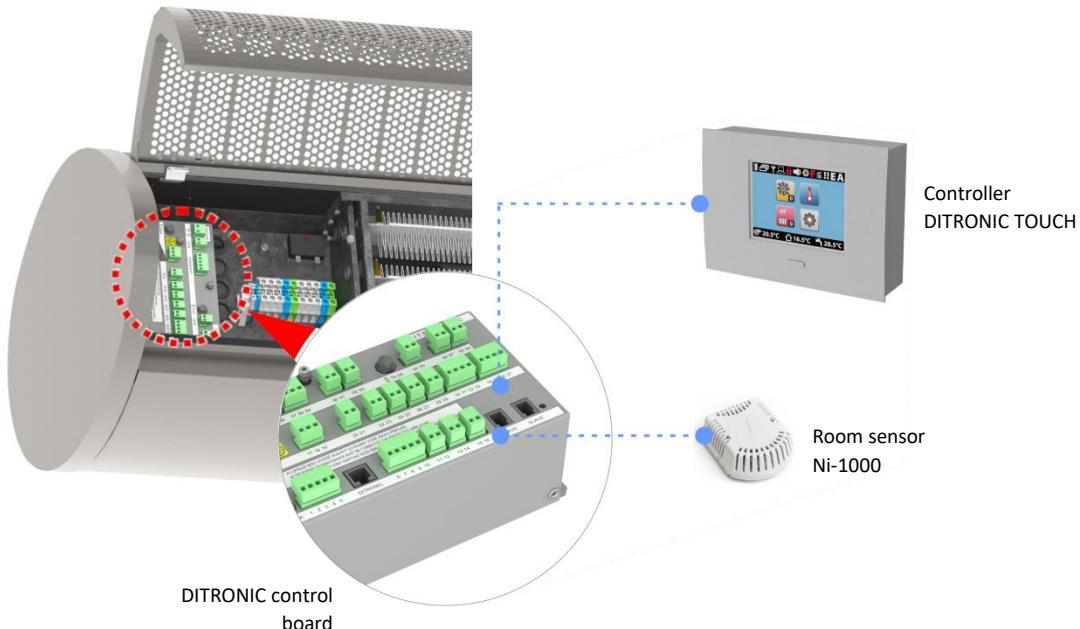

9. Electric connection of the curtain



The curtain must be protected by a suitable circuit breaker according to its electric parameters – refer to attached electric wiring. Connect the ready-to-install cables to the terminals following the attached electric wiring schemes, make connection check, equipotential bonding, and finally turn the power supply on. Use the cable wires with cross section suitably rated according to the current load – refer to electric wiring documentation.

The electric grommets for cable are located always on the opposite side of the standard curtains than connection of hot water medium. When connecting the electric installation, it is necessary to open the intake grille and unscrew the box.

Make sure the cable is neither twisted nor deformed in any way. Keep free ends of the cable wires sufficiently long for easy handling and cut the wire only after you are sure the wire is long enough.

Observe generally applicable national provisions, particularly ČSN 12 2002 and other related regulations. Unplug the curtain from mains before any service intervention. Provisions of ČSN 332190, 332000-5-51 ed. 3, and 33 2000-5-54 ed. 3 must be observed for connecting and earthing of the electric devices. Qualified electrician only may perform any electric service works (qualification according to Section 6 of Decree of ČBU No. 50/78 Coll.).



During assembly, carefully check everything and carry out the initial review of the device. Check operation of the FU1-FU3 electric fuses (Ditronic) for interior circuits (for fuse values, refer to the box of electronics), and make sure that the external components (accessories), which may have an essential impact on correct function of the device, operate.

ATTENTION: The delivery note serves as a warranty sheet!

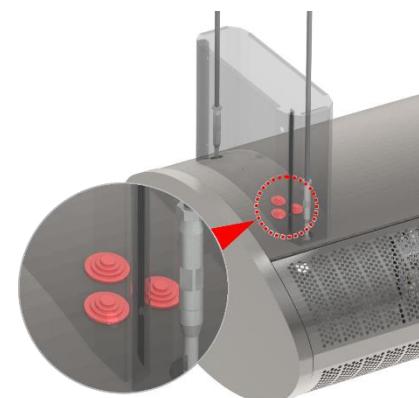


Illustration of bushings for cable

9.1. Unlocking of emergency thermostat for curtains with the electric heater




The curtains fitted with the electric heater are provided with operation thermostat with automatic reset feature (located on each heater) and emergency thermostat with manual reset.



When permitted limit temperature inside the curtain is exceeded, heating circuit is turned off by the emergency thermostat = pushbutton sprung up. The button is used to unlock the safety thermostat in case of the device failure. After cooling down the thermostat button needs to be pressed back to default position (refer to figure).

ATTENTION – unblocking of the emergency thermostat does not resolve failure of the curtain! Always remedy the cause of the thermostat overheating!!!

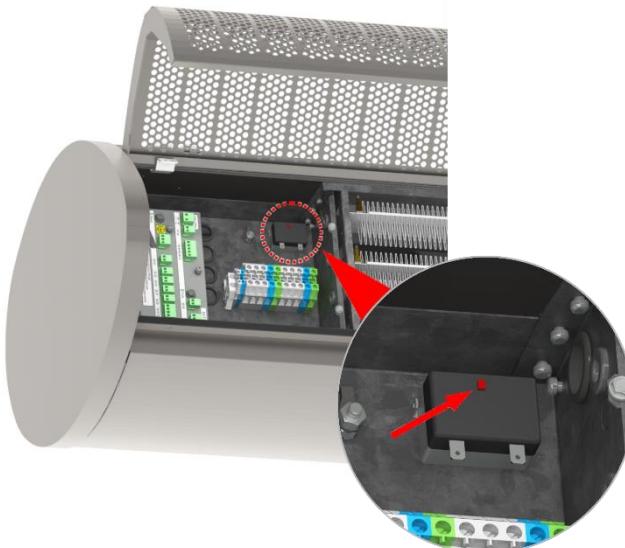

Covering of the air curtain with any strange objects is prohibited ► risk of fire!!!

10. Commissioning, starting of the curtain

Before commissioning make and check:

- covers and shell of the curtain are in perfect condition,
- mechanic fixing and anchoring of the curtain,
- ability to remove the filter and its cleanliness,*/**
- fixing of thermostatic head and its setting,*/**
- function of circulating pump (not included in the device),**
- correct connection of media and tight connections,**
- tightness and function of the valves,*/**
- availability of power voltage,
- correct connection of all curtain cables,
- fitting and setting of a pre-circuit breaker (not included in the device),
- free from mechanical impurities or objects.

*- if installed

**- hot-water version only

Initial review of the electric appliance according to ČSN 331500 and ČSN 33 2000-6-61 ed. 2 must be made upon commissioning.

11. Optional accessories - depending on equipment level



The most frequent accessories include electrothermic valves for the temperature control (chapter 7.1). The valves are usually embedded by the manufacturer, for all available valve types refer to the catalogue.

Another accessory used is the door contact (either magnetic or mechanic). The contacts are placed on the door wings or door parts in order to signal the position of the door.

An optional accessories may be e.g., room thermostat, hanging of the curtain, 0–10V signal control of the curtain over the superior BMS, and more. Selection of an appropriate type of accessories must be supported by the controller type.

For all accessories offered for the Nucleo curtain, refer to the catalogue documentation.

12. Basic service and maintenance information



All curtains are thoroughly checked and tested by the manufacturer before dispatch. The most frequent errors root from misunderstanding of the curtain function or incorrect cabling and connection. For this, observe instructions from the manufacturer to avoid complex troubleshooting. In no case try to operate the curtain when connected in a different way - the curtain may operate for a while as you wish or expect but this irreversible step may result in damage beyond repair and loss. No warranty claims can be accepted with respect to this damage.

The Nucleo air curtains are made of quality materials that require no special maintenance. However, we recommend that maintenance is required or shorter (depending on your observations due to operation in a specific application) intervals is carried out for long lifecycle of the curtain.



Before any work with the curtain, disconnect the electric power supply, mains supply for the curtain. Electric shock hazard!!!

Observe generally applicable national provisions, particularly ČSN 12 2002 and other related regulations. Unplug the curtain from mains before any service intervention. Provisions of ČSN 332190, 332000-5-51 ed. 3, and 33 2000-5-54 ed. 3 must be observed for connecting and earthing of the electric devices. Qualified electrician only may perform any electric service works (qualification according to Decree of ČBU No. 50/78 Coll., § 6 is required).

Please contact your vendor or distributor for a service agreement. You will get regular service and excellent care of your curtain.



Quarterly checks:

- Curtain hanging and tightening of all bolt connections. Check tightening of bolts of exhaust splines - accessible from internal side wall of the curtain, tighten the central splines by turning the splines (by tightening of the internal thread pin).
- Heat exchanger space check and remove dirt or foreign objects (use vacuum cleaner for dedusting, or steam for stuck dirt). When using steam for removal of dirt, always proceed downstream the air flow. Set as lowest temperature as possible and as lowest steam pressure as possible for not to damage the heat exchanger by cleaning (remove filter before cleaning – filter damage hazard).*
- Check cleanliness of the motor body and inner or outer parts of the curtain. Do not wash the motor body with water! Wipe with lukewarm towel only – motor winding damage hazard; after the motor is cleaned, do not turn the curtain on for 60 minutes – let it dry properly. Proceed carefully when wiping of the exhaust splines - fragile splines - danger of damage!!
- Before winter, check in particular the anti-frost protection function, superior circulating pump (not included in the supply of the device), setting of thermostatic or electrothermic valve.*
- Re-test tightness of the curtain or of installed fittings on the water side. If a sludge filter is installed before the curtain – clean the filter and check deaeration of the heat exchanger.*
- Check curtain safety with respect to electric shock hazard according to applicable ČSN or national standards, including earthing inspection.
- Thorough cleaning of the suction grid, exhaust splines (tighten up, if necessary).

* if installed

12.1. Troubleshooting

Problem	Possible cause	Remedy
The curtain cannot be turned on	Curtain circuit-breaker is off	Turn on
	Mains failure	Inspection
	Fuse in the curtain	Inspection
	Door contact	Check connection or interconnection
	Anti-frost protection	Inspection
	Controller position "0"	Check, > position than "0"
	External contact	Check connection or interconnection
Noisy motor	Defective motor mount	Check - replacement
	Clogged filter*	Check - replacement
Motor overheats (motor thermal contact turns off)	Defective motor mount or winding	Replace fan curtain
	Clogged filter*	Check, clean
	Heavily soiled motor – insufficient cooling	Check, clean
	Excessive temperature of intake air	Inspection
	Excessive temperature of intake medium	Check setup, remove
The fan delivers little air only	Clogged filter*	Check - replacement
	Soiled heat exchanger	Check - replacement
Curtain is not heating	Broken or clogged medium supply	Check - replacement
	Little air flows through the heat exchanger	Check - remove
	Soiled heat exchanger splines	Remove
	Insufficient media temperature	Remove
	Medium does not circulate	Check, deaerate
	Temperature achieved in line with controller setup	Controller setup
	Defective drive of electrothermic valve	Check setup, or replace if defective
Automatic operation disconnection	Overheated motor	Find out and clear the cause
	Door contact	Check correct function (refer to controller description)
	External clock	Check correct function (refer to controller description)

* if installed

12.2. Bulb replacement, lighting check




A design element of Nucleo 3000 air curtain is lighting of an exhaust portion. In case of failure, the lighting needs to be removed and LED bulb replaced.

Procedure:

1. Easily pull the suction grid to release it.
2. Loose the bolts that lock the revision board. The board tips out.
3. Disconnect the wires to the bulb cover.
4. Demount the bulb cover by loosening the screw and remove it from the air curtain.
5. Replace the bulb.

For assembly, proceed in reverse.

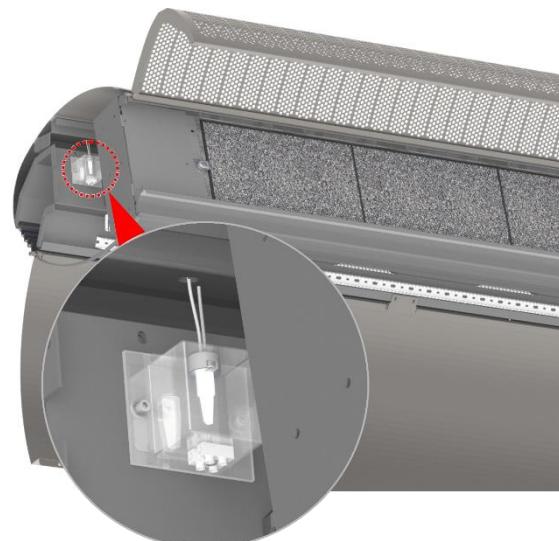

13. Cleaning/replacement of the filter




Hot-water curtains are fitted with an air filter. The filter must be cleaned regularly to ensure the efficiency of the curtain and its performance levels. The frequency of cleaning depends on local conditions under which the curtain operates – checking of the filter and cleaning thereof is recommended at least monthly. Clogged filter does not stand for a safety risk but operation of the curtain may deteriorate.

Filter removal:

1. Easily pull the suction grid to tip it out.
2. Release the filter from the curtain by rotating the locks on the filter sides – the filter is accessible through the suction hole.
3. Remove the filter and get rid of the dust particles. Replace the filter if the clogging is still apparent despite thorough cleaning, or if the fabric is mechanically damaged.

A spare filter can be ordered as optional accessory in the set of 3 pieces. Use genuine filters only. **Use of a filter other than the one approved by the manufacturer is prohibited.**

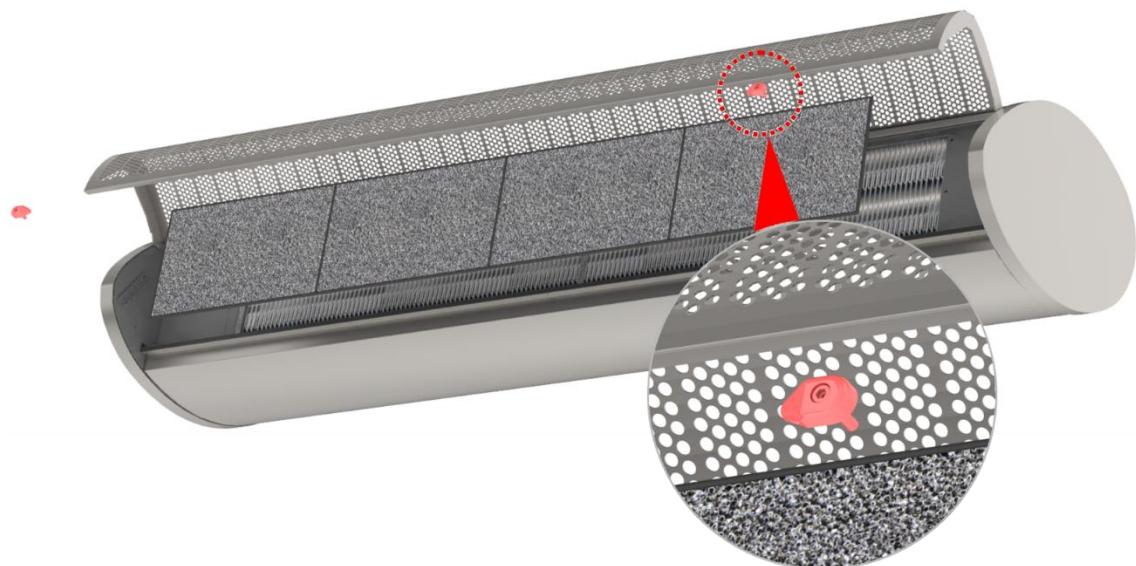

14. Decommissioning – disposal



After the expiration of the service life, the curtain must be disassembled and disposed of. Only qualified company may disassemble the device. The product or components thereof must be disposed in environmentally-friendly manner at the end of its service life.

The components of the curtain must be separated and sorted out by type of material for disposal. Dispose of the metal and plastic components at your local collection yard. The transport packaging of the product is made of common recyclable material (paper, polyethylene, wood) and is labelled as such according to ČSN 77 0052-2.

As far as disposal is concerned, it is operator's responsibility to comply with applicable national provisions in the country of use. In addition, follow regulations and laws of your country applicable to waste disposal. Separated collection and recycling of the products may help to protect environment and human health.

15. Important notes



The door curtains are intended to avoid heat or cold loss, filtration, and heating, or for ventilation in combination with mixing accessories. Other uses are not intended. The manufacturer accepts no liability for damage resulting from use other than intended. Observe this manual in operation of the curtains.

Installation, electric connection, and repairs must be carried out by qualified persons according to § 6 of Decree No. 50/78 Coll. or according to applicable national standards and regulations. An expert company is needed to connect the heating medium.

Before the start of the heating season, it is necessary to provide the required amount of heating medium with the design values for curtains with the hot water heater.

The manufacturer reserves right to changes for marketing or production reasons without prior notice!



STAVOKLIMA s.r.o.
Budějovická 450, 370 01 Homole
Tel.: +420 387 001 931
e-mail: info@stavoklima.cz
www.stavoklima.cz

